


- APP
- ENG
- IC
- ASM
- SHP
- UPH
- TS
- MAN
- UL

IF NOT 5,000 OR 2,500 OHM'S YOU HAVE A BAD POT. PART# T-001-339 THROTTLE LEVER ASSEMBLY.

STEP 6 TEST POT FROM ORANGE TO BLUE 5,000 OHM'S AND FROM YELLOW TO BLUE WILL BE 2,500 OHM'S. (UNPLUG FROM PC BOARD TO TEST)

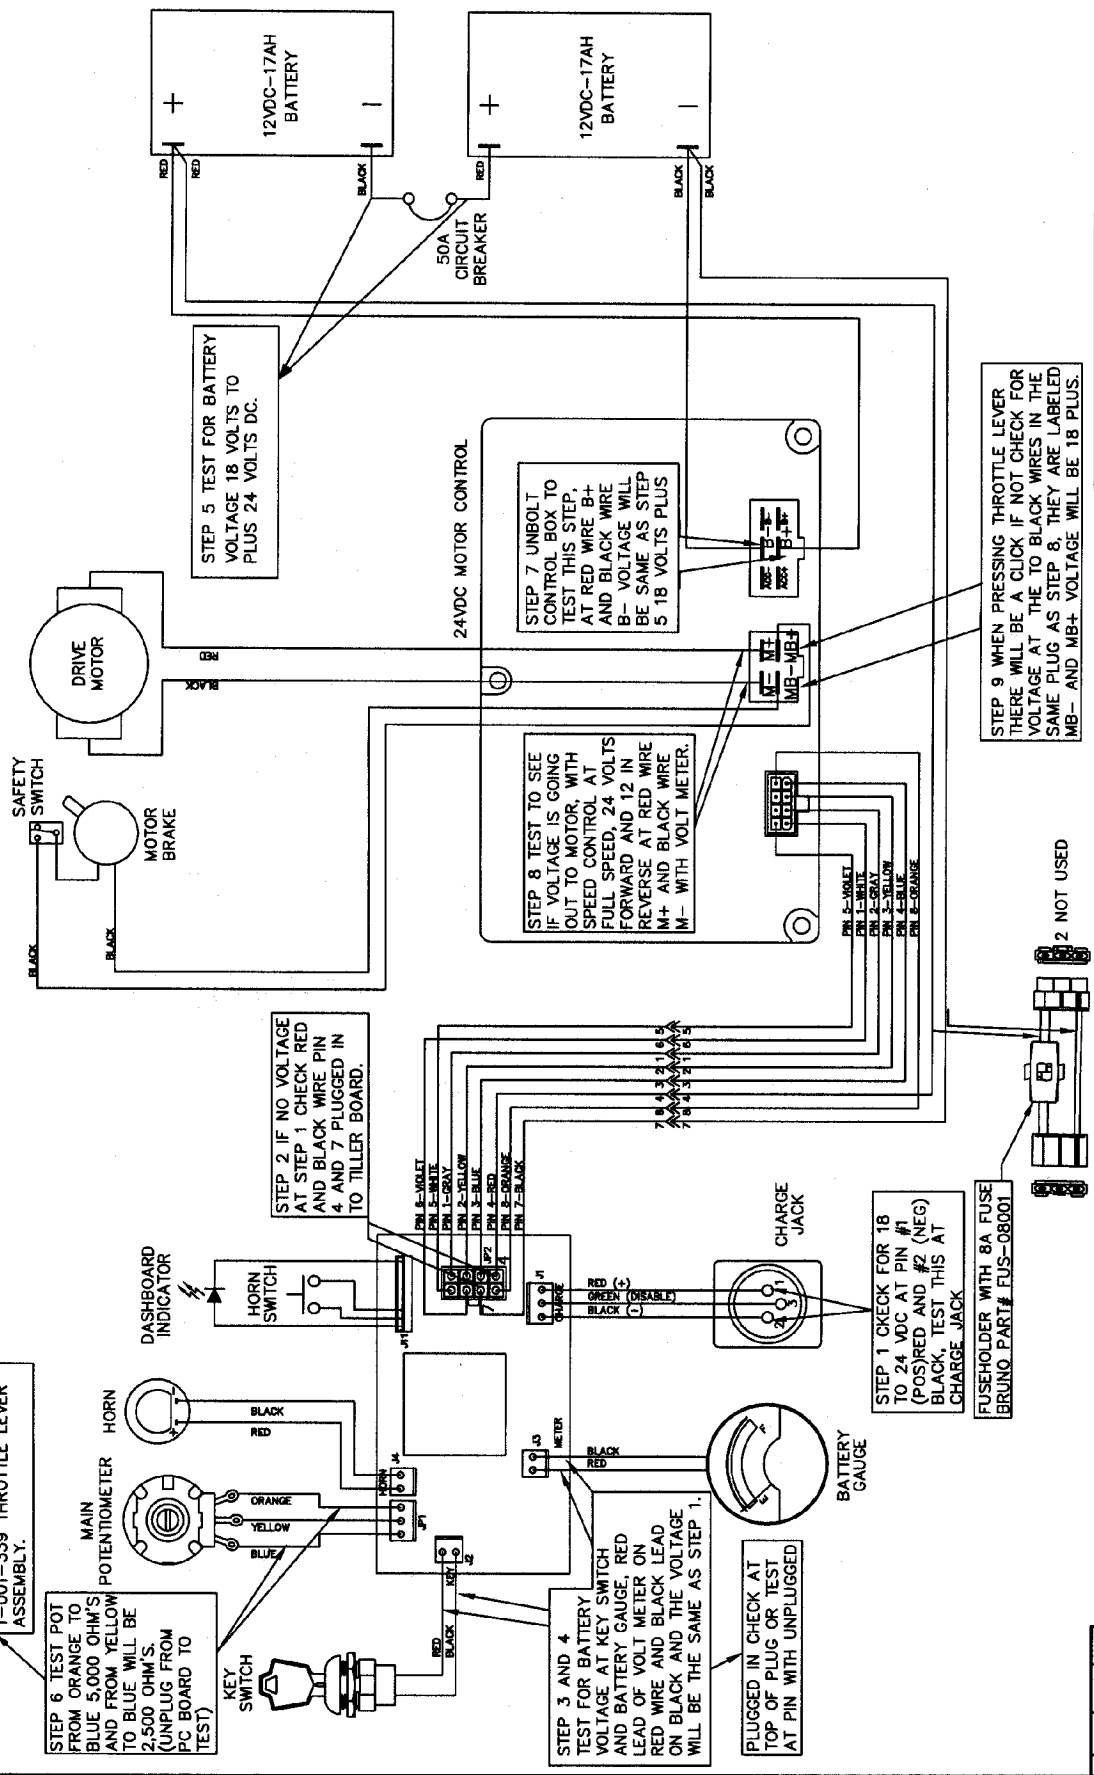

BRUNO

ISO 9001 CERTIFIED

1780 EXECUTIVE DRIVE, P.O. BOX 84

OCONOMOWOC, WI 53066

(262) 567-4990

FAX (262) 953-5504

Part must be true of mating parts and able to accept repair or overhaul, and burn.

Service TYPHOON C3 SCH-00067

WIRING DIAGRAM (COMPLETE)

SERVICE TROUBLESHOOTING SCHEMATIC

10/15/01

1

revisions

rev.	date	by

© 2003 BRUNO INDEPENDENT LIVING AIDS, INC.